

NORLAKE[®]

GRAND[™] SERIES SOLID DOOR FREEZERS

Nor-Lake's advanced engineered commercial design incorporates the latest in cabinet, refrigeration and temperature control and monitoring features. Full size Reach-in Freezers provide energy efficient, convenient, safe and reliable performance for optimal storage temperature environments necessary for a wide range of commercial and industrial cold storage applications.

Standard Product Features:

- Digital LED display microprocessor temperature controller
- Selectable °F or °C control
- Visual Hi/Lo temperature alarm
- Adjustable control range from -13°C to -30°C (-8.6°F to -22°F); factory preset at -20°C (-5°F)
- Door open alarm
- Continuous temperature display
- Condenser cleaning reminder alarm
- Power supply switch
- Exterior cabinet front and sides are stainless steel
- Exterior cabinet top, back and bottom are galvanized steel
- Interior cabinet liner and interior door panel are stainless steel
- Cabinet and solid door are foamed-in-place with CFC-free high density polyurethane foam insulation
- Heavy duty solid door(s) with pivot hinges. Self-closing with 90° stay open feature
- Curved door handle(s) with recessed pocket(s)
- Magnetic door gaskets
- Top mounted key door lock(s) (2 keys)
- 4 casters (2 locking) on one and two door models, 6 casters (3 locking) on three door model
- Field installation of casters required
- 4 vinyl coated wire shelves per door section
- Perimeter anti-condensate door frame heater wires
- Interior light, door switch activated
- Bottom mounted air cooled condensing unit
- Top mounted forced air cooling coil
- Automatic defrost and condensate evaporation
- Warranties: 18 month parts and labor, 5 year compressor (US and Canada), 18 months parts (International)
- UL, C-UL, ETL Sanitation




GF23SSS/0




GF49SSS/0

GF72SSS/8


NOR-LAKE, INCORPORATED
 727 Second Street
 Hudson, Wisconsin 54016
 800-477-5253
 715-386-2323
 800-388-5253 PARTS
 715-386-4290 FAX
www.norlake.com

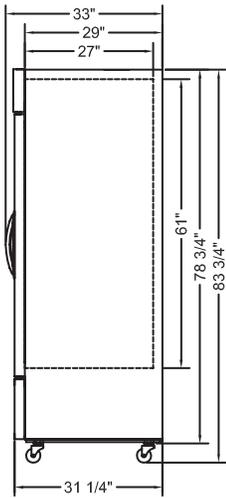


SIDE VIEW
ALL MODELS

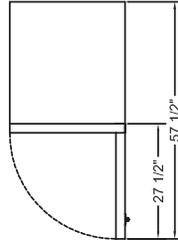

GF23SSS/0
TOP

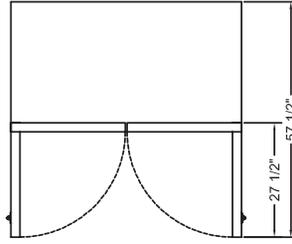


GF49SSS/0
TOP

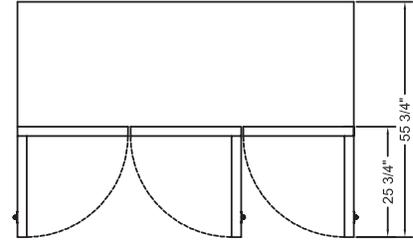


GF72SSS/8
TOP

SPECIFICATIONS


| Models | GF23SSS/0 | GF49SSS/0 | GF72SSS/8 |
|----------------------------|--------------|--------------|--------------|
| Crated Weight (lbs) (kg) | 308 (139) | 483 (217) | 653 (294) |
| Crated Height (in) (cm) | 84-1/4 (211) | 84-1/4 (211) | 84-1/4 (211) |
| Crated Width (in) (cm) | 29-1/8 (73) | 56-3/4 (142) | 78-3/8 (196) |
| Crated Depth (in) (cm) | 33-1/2 (84) | 33-1/2 (84) | 33-1/2 (84) |
| Interior Height (in) (cm) | 61 (153) | 61 (153) | 61 (153) |
| Interior Width (in) (cm) | 23-3/4 (59) | 51-1/2 (129) | 74-1/4 (186) |
| Interior Depth (in) (cm) | 27 (68) | 27 (68) | 27 (68) |
| Overall Height (in) (cm) * | 83-3/4 (209) | 83-3/4 (209) | 83-3/4 (209) |
| Overall Width (in) (cm) | 27-1/2 (69) | 55-1/4 (138) | 78 (195) |
| Overall Depth (in) (cm) | 33 (83) | 33 (83) | 33 (83) |
| Gross Cubage (CuFt) (L) | 23 (651) | 49 (1387) | 70 (2002) |
| Number of Shelves | 4 | 8 | 12 |
| Shelf Area (SqFt) (Sqm) | 18 (1.67) | 39 (3.6) | 56.5 (5.25) |
| Number of Casters ** | 4 | 4 | 6 |
| Condensing Unit Size | 3/5 HP | 4/5 HP | 1 HP |
| Refrigerant | R-404a | R-404a | R-404a |
| Electrical Characteristics | 115/60/1 | 115/60/1 | 115/60 /1 |
| Cord & Plug Furnished | Yes | Yes | Yes |
| NEMA Plug Configuration | 5-15P | 5-15P | 5-20P |
| Total Amp Draw | 8.5 | 10.5 | 12.0 |

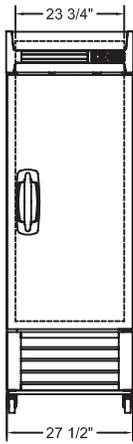

GF23SSS/0
FRONT

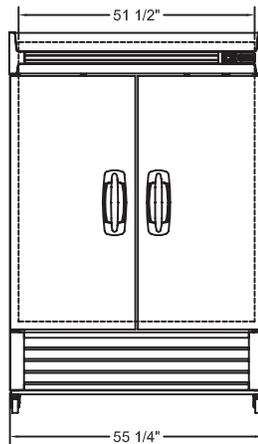

GF49SSS/0
FRONT

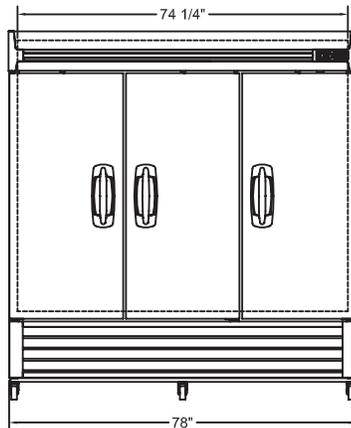

GF72SSS/8
FRONT

Specifications subject to change without notice.

* The overall heights shown in the table and drawings are with casters.

** Field installation of casters required.

